

---

# 76CM PYROLYTIC STEAM ASSIST OVEN

## FIRST USE

---

Get to know your appliance	3
Set up the oven	6
Select a cooking method or function	7
Set the timer	9
Set Delayed cook or Auto Off	10
Use the temperature sensor	11
Use Multi shelf	12
Use Steam assist	13
Connect to Wi-Fi	14
Enable Remote mode	15
Fill the water tank	16
Turn Sabbath mode on	17
Enable Voice to open	18
Cooking methods and functions	19
Clean and maintain your oven	20

**FISHER & PAYKEL**

NZ AU

## **76CM PYROLYTIC STEAM ASSIST OVEN**

---

### **MINIMAL**

OB76SMPSUB3, OB76SMPSUG3,  
OB76SMPSUNB3, OB76SMPSUNG3

### **CONTEMPORARY**

OB76SCPSUDX3

### **PROFESSIONAL**

OB76SPPSUX3

# GET TO KNOW YOUR APPLIANCE



 
## How to get the best results from your oven

- Download the app to use remote mode and get updates.
- Set up and condition the oven before you use it.
- Run regular **CLEAN** cycles.
- Register your product to get streamlined service support.



\*Some models only.

# GET TO KNOW YOUR APPLIANCE

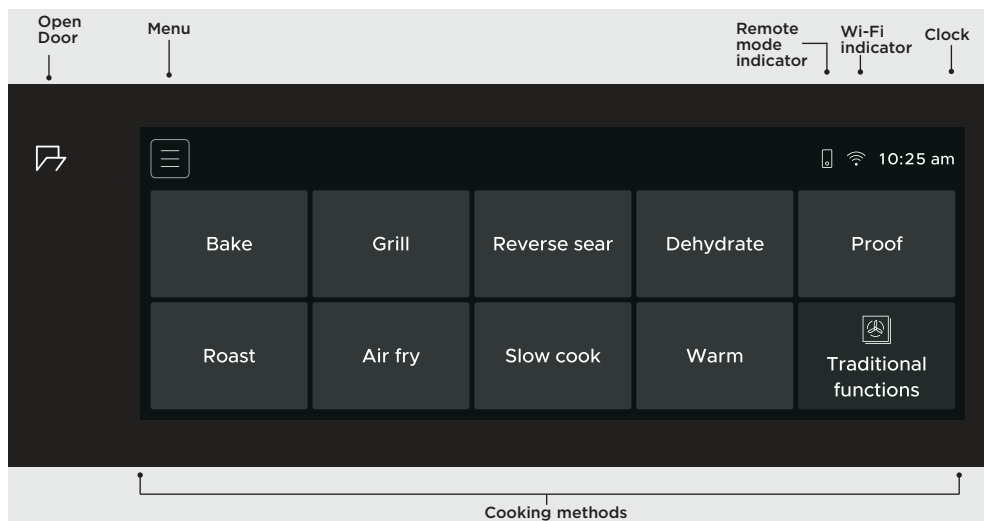

## HOME SCREEN

### Control dial\*

- Turn the dial to scroll.
- Press to select.
- Press and hold to go back.

### Open Door button\*\*

Press and hold to open or close the oven door.

### Menu

 
Press to access additional features and settings.

### Cooking methods







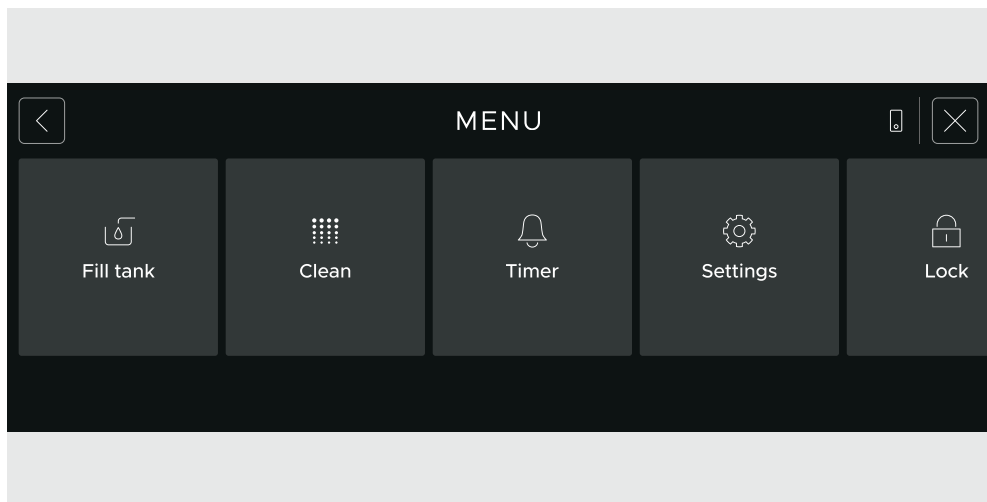


Choose from a range of optimised cooking methods or traditional functions.

\*Some models only

\*\*Handleless models only



## MENU

	<b>FILL TANK</b>	Press <b>FILL TANK</b> to open water tank.
	<b>LIGHT</b>	Press <b>LIGHT</b> to turn the oven lights on or off.
	<b>TIMER</b>	Set a timer to keep track of cooking times or as a general timer. The timer does not turn the oven off.
	<b>CLEAN</b>	Set a <b>CLEAN</b> cycle to clean the inside of the oven. Refer to Care and Maintenance guide for full instructions.
	<b>LOCK</b>	Lock the controls to prevent accidental use. When locked, the controls will be unresponsive and the appliance will not turn on. Press and hold the screen anywhere to unlock.
	<b>SETTINGS</b>	Adjust the settings to suit your preferences or set up a Wi-Fi connection.
	<b>REMOTE</b>	Connect appliance to your mobile device to operate it remotely via the app.
	<b>BACK</b>	Go back one level.
	<b>EXIT</b>	Press to return to the home screen.

 
## SET UP THE OVEN

We recommend conditioning your oven for 1 hour before initial use to eliminate any manufacturing residue. A small amount of smoke may be present. Ensure the kitchen is well ventilated.



### Remove cable ties

Remove any packaging and the cable ties that are securing the shelves and trays.

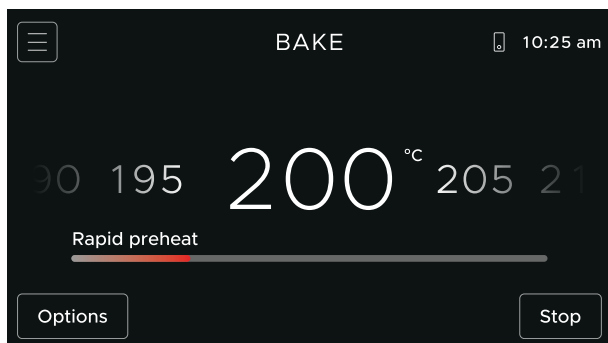

### Condition the oven

Select **BAKE**, then **SKIP**, and set the oven at 200°C for 30 minutes.

Select **OPTIONS**, **CHANGE FUNCTION**, and set to **FAN GRILL** for 5 minutes, then **FAN FORCED** for 20 minutes.

Wipe clean once oven has cooled.

WATER HARDNESS (PPM)	LEVEL
0 - 100	ZERO
100 - 250	ONE
250 - 350	TWO
350 - 450	THREE

### Set water hardness level

In **SETTINGS**, select **DESCALE WATER HARDNESS** and set hardness level before first using steam-assisted functions.

 
Contact local water supplier to confirm level.

## SELECT A COOKING METHOD OR FUNCTION


Select a cooking method and follow onscreen instructions for an optimised cooking environment, or choose from a range of traditional cooking functions.



1. Position the shelves at the desired height.

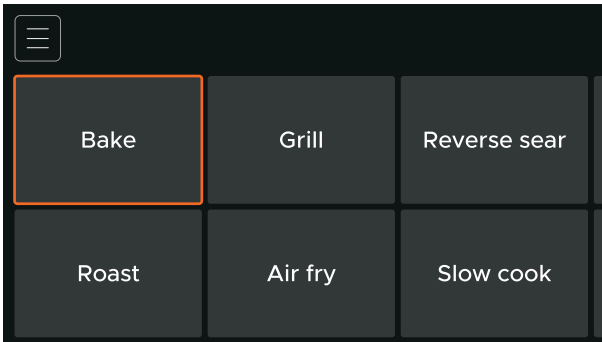


 2. Select a cooking method or scroll to select **TRADITIONAL FUNCTIONS**.

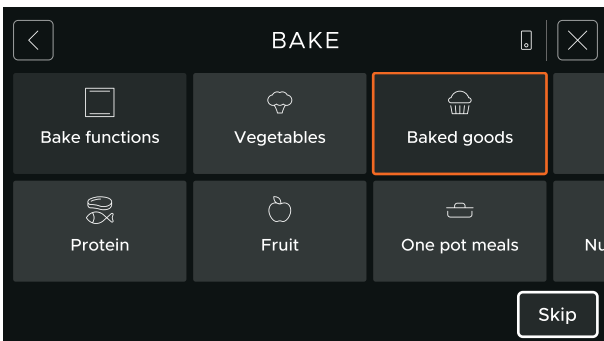


3. Select a food type or function as required.

## SELECT A COOKING METHOD OR FUNCTION

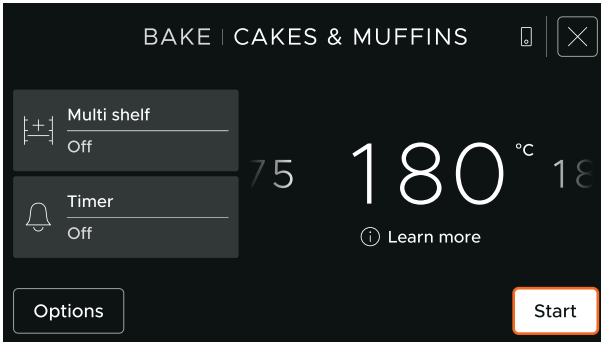 


4. Adjust the temperature if needed and add any additional timers or cooking options, then press **START**.

 Press **STOP** at any point during cooking to turn the oven off.

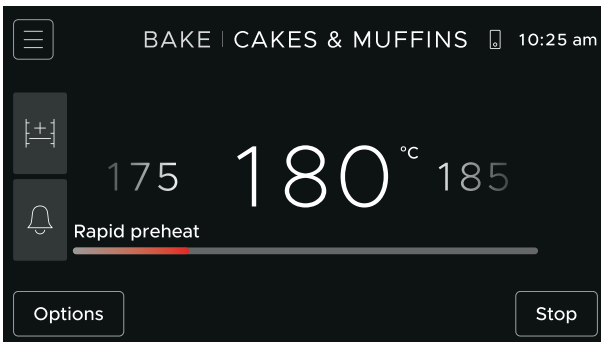

### Methods with preheat

 A progress bar will show while the oven is heating. To prevent burning, place food in oven once oven reaches temperature.

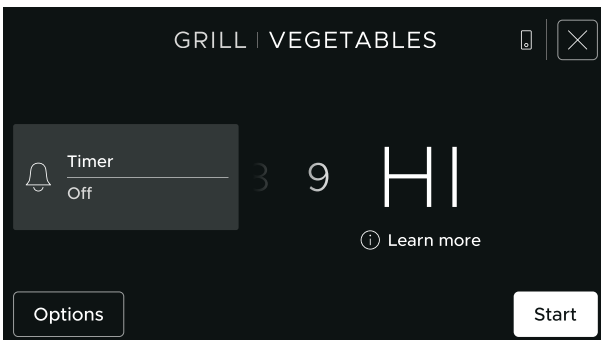

### Methods without preheat

 
If there is no progress bar, place food in the oven when you start the cook.

Press **STOP** at any point to turn the oven off.

## SET THE TIMER




Use the timer to keep track of cooking times or as a general timer. The timer does not turn the oven off.

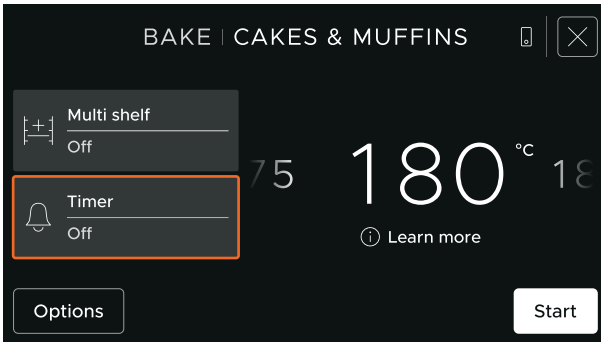

1. Select **TIMER** from the menu or from the cooking screen.



 2. Scroll to set the desired duration, then press **CONFIRM** to start the countdown.

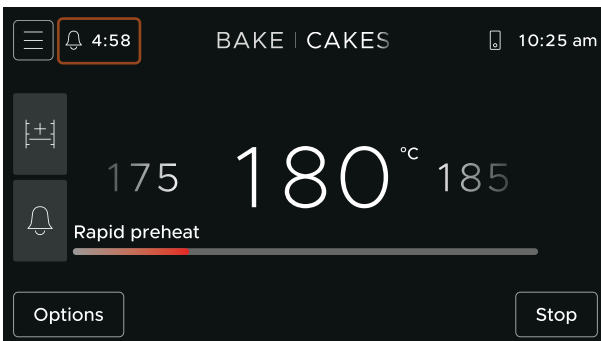


3. The remaining time will show on the screen. Press it to adjust or cancel the timer.

When the timer is complete, an alert will sound and a message will show on the screen. Press **DONE** to dismiss the message.

## SET DELAYED COOK OR AUTO OFF



 You can set **DELAYED COOK** or **AUTO OFF** when using most cooking methods or functions. Use **DELAYED COOK** to set the oven to turn on later, cook for a set duration and turn off at a set time. Use **AUTO OFF** to set the oven to turn off after a set duration.

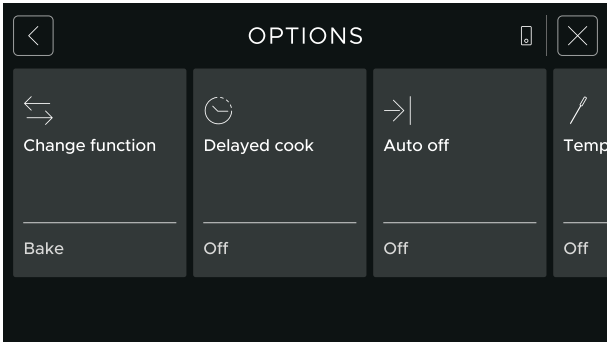

Press **OPTIONS** on the cooking screen, then select **DELAYED COOK** or **AUTO OFF**.




### Delayed cook

 Set a cook duration and a cooking end time, and press **CONFIRM**.

Cover food or place it on a lower shelf in oven to prevent burning as the oven preheats.

Not recommended with **GRILL**, **FAN GRILL**, **PROOF**, **DEFROST** or **AIR FRY**.

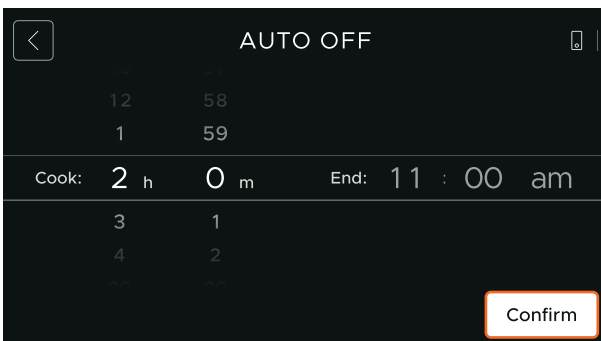

### Auto off

Set a cook duration, and press **CONFIRM**.

 
The oven will turn off after the set duration.

## USE THE TEMPERATURE SENSOR



Use the wired temperature sensor or a compatible wireless sensor to monitor your cook to achieve your desired doneness.

Insert the sensor into the thickest part of the protein, avoiding fat and bone, and ensure the tip doesn't protrude or touch cookware.

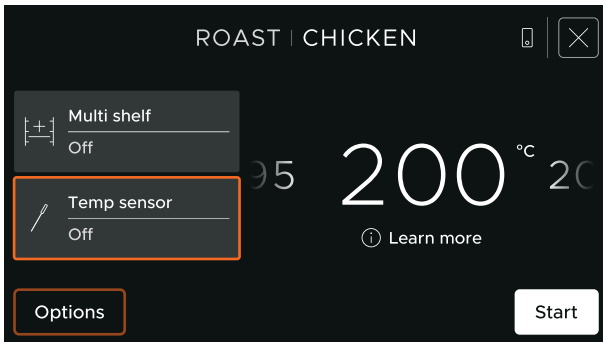


1. Select a cooking method or function and press **OPTIONS** or **TEMP SENSOR**.



2. Select the relevant protein and desired doneness or removal temperature, then press **START**.

 Allow your oven to preheat if necessary.

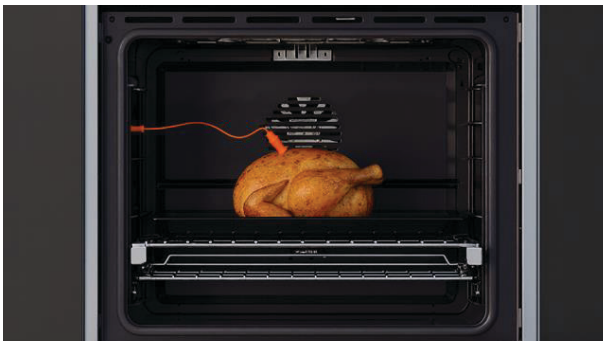


3. Place food in the oven. If using the wired sensor, plug it into the socket on the inside-left of the oven until it clicks into place.

Rest meat before serving to allow the internal temperature to rise.


## USE MULTI SHELF



 
Use the **MULTI SHELF** option so heat distributes evenly when you cook food on more than one shelf at a time. You can turn it on or off before and during cooking.

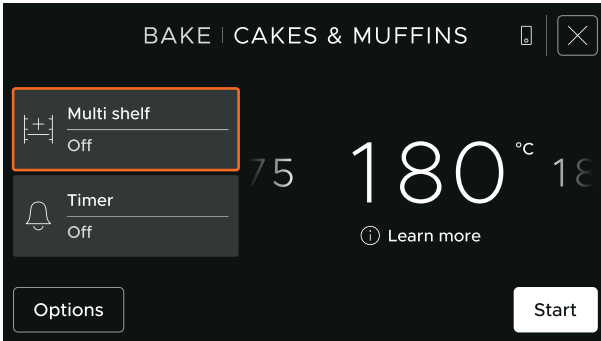

 1. Select a cooking method or function, and press **MULTI SHELF**.

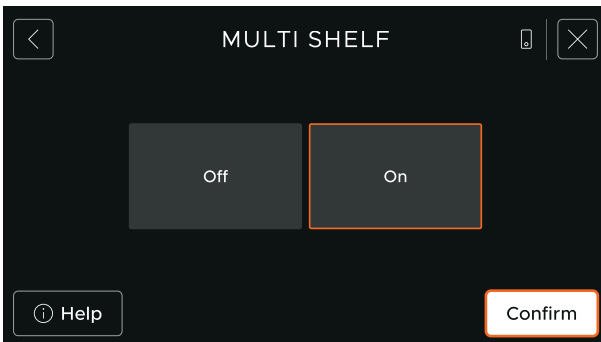

 2. Press **ON**, then **CONFIRM**.

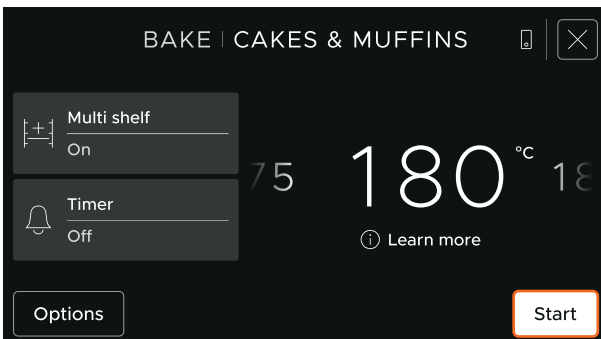


3. Press **START**, and allow your oven to preheat if necessary before putting the food in. Press **MULTI SHELF** again to turn it off.

## USE STEAM ASSIST




 You can use **STEAM ASSIST** with some cooking methods to add moisture to the cooking environment and enhance cooking performance. The steam level adjusts automatically to suit the cooking method and food type.


Fill the tank with fresh water first. See 'Fill the water tank'.

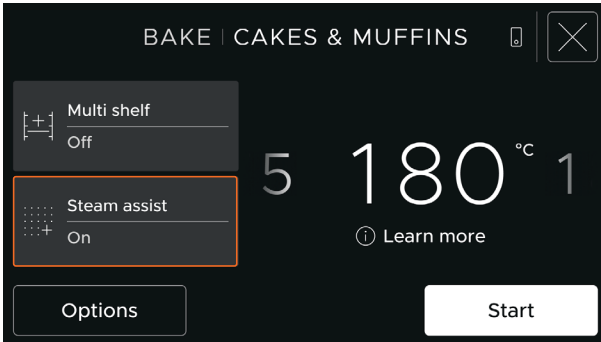

 1. Select a cooking method, and press **STEAM ASSIST**.

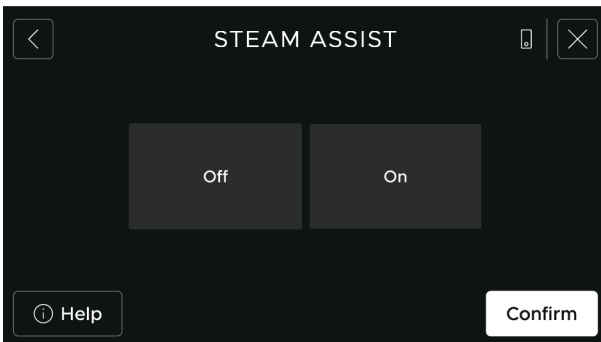

 2. Press **ON** or **OFF**, then **CONFIRM**.

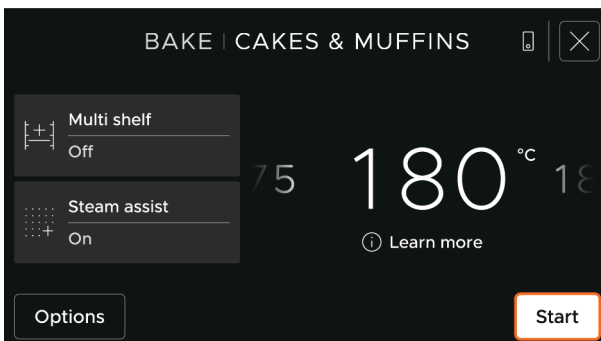


3. Press **START**.

## CONNECT TO WI-FI



 
Connect your appliance to your home wireless network to receive updates and connect to the app.

It may take up to 10 minutes to connect your appliance.

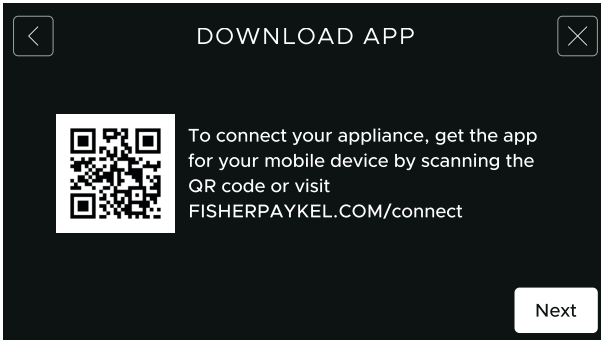


### On your mobile device

 Scan the QR code to download the app, then create an account and add your appliance.

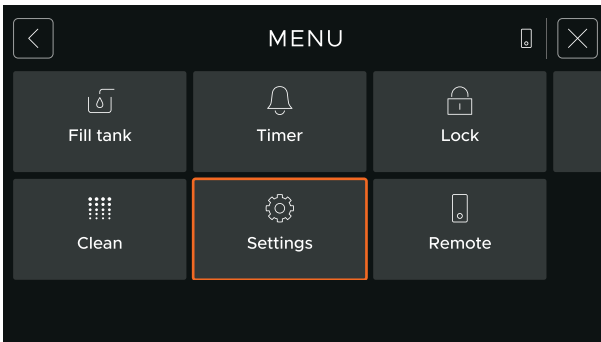

### On your appliance

 1. Ensure your home Wi-Fi network is on, then go to **MENU** and select **SETTINGS**.

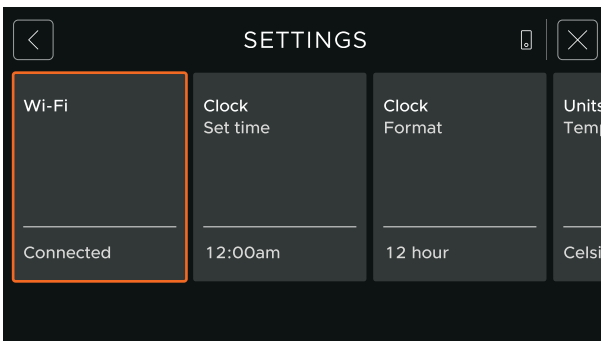


2. Select **WI-FI** and follow the onscreen instructions to connect.


# ENABLE REMOTE MODE



 
Enable **REMOTE MODE** to operate your appliance remotely via the app.

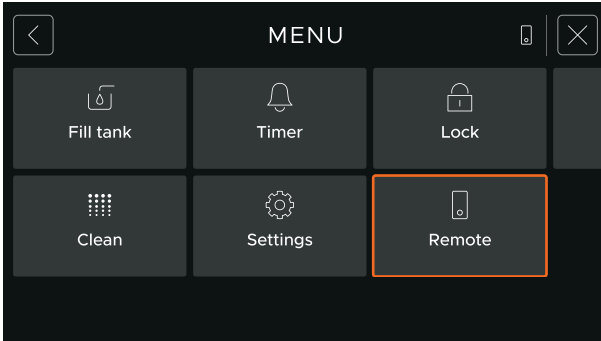

 1. Go to **MENU**, and select **REMOTE**.

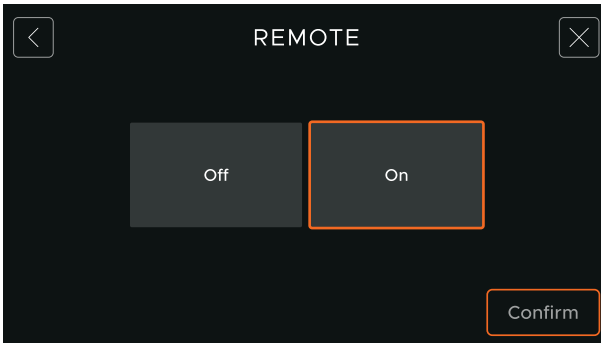

 2. Select **ON**, then press **CONFIRM**.

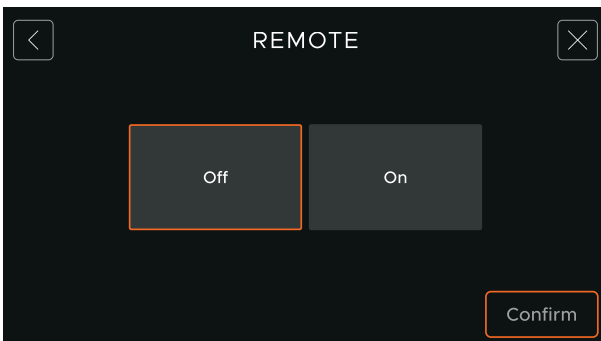


## Disable Remote Mode

Go to **MENU**, and select **REMOTE**.  
Select **OFF**, then press **CONFIRM**.


## FILL THE WATER TANK



 Before using any steam-assisted methods, you'll need to fill the water tank. For best results, we recommend filling the tank with fresh water before you cook.

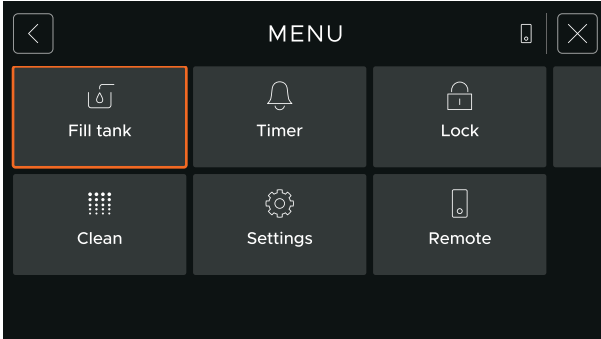

 1. Go to **MENU** and select **FILL TANK**. The tank will open.

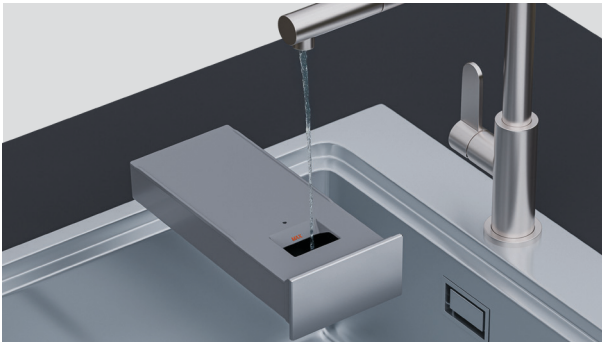

2. Remove the tank, and fill with fresh water, taking care not to fill past the **MAX FILL** line. Refit the tank in the compartment.


# TURN SABBATH MODE ON

 For the Sabbath observant. Sets your oven to heat continuously for as long as needed. The display will be unresponsive and no tones or alerts will sound. Your oven will stay in Sabbath mode until cancelled. See the Care and maintenance guide for manual door-opening instructions.


**LOW**  
Keep hot food warm

**MODERATE**  
Reheat cold food


**HIGH**  
Cook raw food

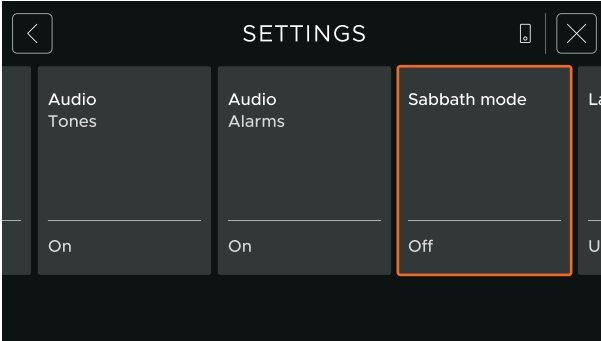

 1. Go to **SETTINGS** and select **SABBATH MODE**.

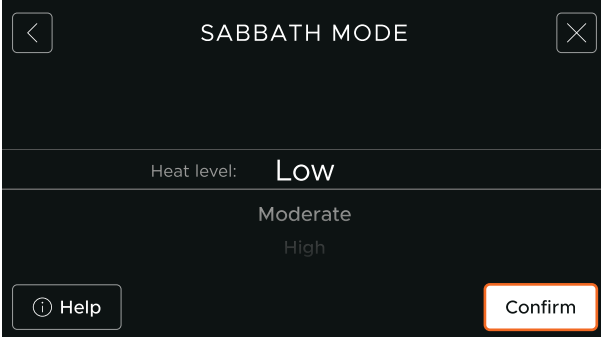

 2. Set a heat level and press **CONFIRM**. Follow the onscreen instructions to set the oven light on or off and to set a **SABBATH MODE** duration.

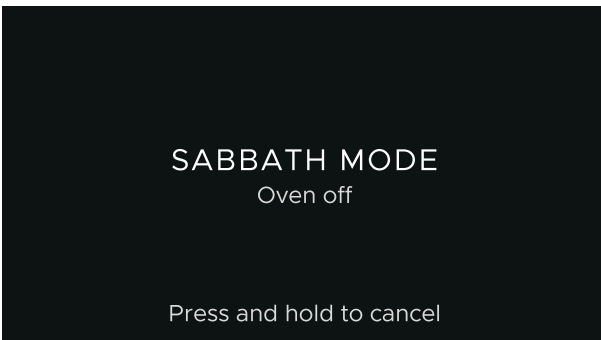


3. The oven will stay in **SABBATH MODE** until the set duration has passed or until cancelled. Press and hold the screen to cancel **SABBATH MODE**.


## ENABLE VOICE TO OPEN

 Enable 'Voice to open' on handleless models to open the oven door. Your appliance must be connected to Wi-Fi and have Remote Mode enabled. Voice control also requires a smart speaker or your mobile device to control the oven door.

Only use voice control when you can see the oven and it is safe to open the door.

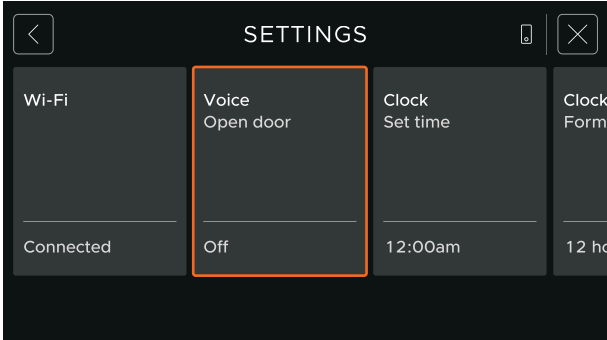

 1. Go to **SETTINGS** and select **VOICE OPEN DOOR**.

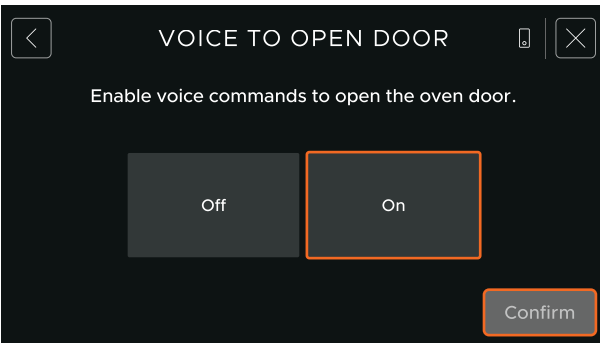

2. Select **ON**, then **CONFIRM**.  
Follow the instructions on the screen and in the app to complete the setup.

## COOKING METHODS AND FUNCTIONS

Method-led cooking lets you select what you want to cook and how you want to cook it. Your oven will then recommend the optimal heat type and temperature for perfect cooking results. Explore the full range of methods and functions available.

<b>Cooking methods</b>	Bake	Slow Cook
	Grill	Reverse Sear
	Roast	Dehydrate
	Air Fry	Proof
	Warm	Regenerate
<b>Functions</b>	Air Fry	Maxi Grill
	Bake	Classic Fan
	Classic Bake	Rapid Proof
	Dehydrate	Roast
	Fan Bake	Slow Cook
	Fan Forced	Vent Bake
	Fan Grill	Warm
	Grill	Crisp Regenerate
	Fan Forced + High Steam	Fan Forced + Medium Steam
Fan Forced + Low Steam		

## CLEAN AND MAINTAIN YOUR OVEN

Make these steps a regular part of your cleaning routine to get the best results from your appliance.

### **Clean door glass after each use**

Wipe the door glass clean after each use and before running a pyrolytic self clean cycle to prevent stains becoming baked on.

### **Clean inside of the oven after each use**

Clean up any easy-to-reach spills, food or grease stains in the oven to prevent them becoming baked on.

### **Run regular pyrolytic self clean cycles**

Run a **CLEAN** cycle as required to remove food residue and buildup in the oven.

### **Descalcify to remove mineral buildup**

Run a steam descale cycle when prompted to clean mineral buildup from your oven and maintain cooking performance.



### **Care, maintenance and troubleshooting information**

Scan the QR code or visit [fisherpaykel.com](http://fisherpaykel.com) and search for your model code.

OB76SMPSUB3, OB76SMPSUG3, OB76SMPSUNB3,  
OB76SMPSUNG3, OB76SCPSUDX3, OB76SPSUX3

