

KitchenAid

5 CUP CORDLESS FOOD CHOPPER

5KFCR500A, 5KFCR531A

OWNER'S MANUAL

PRODUCT SAFETY

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1.** Read all instructions. Misuse of appliance may result in personal injury.
- 2.** To protect against risk of electrical shock, do not put the Base of the appliance, USB Adapter, USB Cable, or Battery in water, or other liquid.
- 3.** This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge.
- 4.** Children should be supervised to ensure that they do not play with the appliance.
- 5.** Turn the appliance off, remove the Battery when not in use, before assembling or disassembling parts and before cleaning.
- 6.** Avoid contact with moving parts. Do not override any safety controls.
- 7.** Do not operate any appliance with a damaged Battery, adapter or plug, after the appliance malfunctions, is dropped or damaged in any manner. Return appliance to the nearest Authorised Service Facility for examination, repair, or electrical or mechanical adjustment. This will ensure that the safety of the appliance and accessories is maintained.
- 8.** The use of attachments/accessories not recommended or sold by KitchenAid may cause fire, electric shock or injury to persons.
- 9.** Keep hands and utensils away from the cutting blade while chopping food to reduce the risk of severe injury to person, or damage to the appliance. A scraper may be used, but only when the appliance is not running.
- 10.** Blades are sharp. Handle thoroughly.
- 11.** To reduce the risk of injury, never place cutting blade on Base without first putting Bowl properly in place.
- 12.** Be certain cover is securely locked in place before operating the appliance.
- 13.** Do not attempt to defeat the cover interlock mechanism.

- 14.** Do not use an extension cord. Plug adapter directly into power source.
- 15.** Do not incinerate this appliance even if it is severely damaged. The Battery can explode in a fire.
- 16.** Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.
- 17.** Refer to the “Care and Cleaning” section for instructions on cleaning the surfaces in contact with food.
- 18.** Disconnect the Battery from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
- 19.** Prevent unintentional starting. Ensure the switch is in the off-position before connecting to Battery, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch ON invites accidents.
- 20.** Recharge only with the adapter specified by KitchenAid. A adapter that is suitable for one type of Battery may create a risk of fire when used with another Battery.
- 21.** Use appliances only with KitchenAid 12 V Battery. Use of any other Battery may create a risk of injury and fire.
- 22.** When Battery is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the Battery terminals together may cause burns or a fire.
- 23.** Under abusive conditions, liquid may be ejected from the Battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the Battery may cause irritation or burns.
- 24.** Do not use a Battery or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
- 25.** Do not expose a Battery or appliance to fire or excessive temperature. Exposure to fire or temperature above 129°C may cause explosion.

26. Follow all charging instructions and do not charge the Battery or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the Battery and increase the risk of fire.
27. Never service damaged Battery. Service of Battery should only be performed by the manufacturer or authorised service providers.
28. Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
29. Do not use the appliance for other than intended use.
30. Do not expose the appliance to rain — store indoors.
31. Do not use the appliance in rain or wet conditions.
32. Do not modify or attempt to repair the appliance or the Battery (as applicable) except as indicated in the instructions for use and care.
33. When emptying the Bowl or during cleaning, be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to sudden steaming.
34. Remove empty batteries from the appliance and safely dispose.
35. Remove the Battery if the appliance is stored unused for a long period.
36. If the Battery leaks, remove the Battery from the appliance and do not use the Battery again.
37. Remove rechargeable batteries from the appliance before charging.
38. **IMPORTANT:** Use only with approved USB Adapter by market.
39. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farmhouses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

SAVE THESE INSTRUCTIONS

For complete details on product information, instructions and videos, including Guarantee information, visit www.kitchenaid.com.au or www.KitchenAid.co.nz.

ELECTRICAL REQUIREMENTS

USB Adapter:

Input: 100–240 V~, 50–60 Hz, 0.5 A

USB Output: 5 VDC, 2 A

Recommended ambient charging temperature: 5–40°C

Cordless Food Chopper:

Voltage: 12 V

External Battery (Lithium-ion): 5KRB12A

Nominal Voltage: 10.8 VDC

Maximum Voltage: 12 VDC

NOTE: If the USB Adapter does not fit fully in the power source, contact a qualified electrician. Do not modify the USB Adapter in any way.

NOTE: Do not use or store batteries or products in locations where the temperature is less than 10°C or more than 40°C.

LITHIUM-ION BATTERY OPERATED PRODUCT DISPOSAL

Always dispose the Battery operated products according to federal, state, and local regulations. Contact a recycling agency in your area for recycling locations.

GETTING STARTED

BEFORE FIRST USE

1. Charge the Battery until it is fully charged.
2. Clean all the parts and accessories (see “Care and Cleaning” section).
3. Remove all packaging materials, if present.

NOTE: Some dust may be on the product. This is due to the recycled materials used in packaging. This can be cleaned with a soft towel.

BATTERY CHARGING

USING THE USB CABLE

1. Attach the USB Cable to the adapter. Connect the other end of the USB Cable to the Battery.
2. Plug the USB Adapter into a power source.

PRODUCT USAGE

IMPORTANT: Make sure the Battery is fully charged before using.

1. Insert the Battery on the Battery slot located at the back of the appliance, making sure it is aligned. The LED will glow and display the Battery level for five seconds, then turn off.
2. With the Handle facing the front of the Base, place the Bowl into the slots on the Base.
3. Rotate and lower the Drive Adapter and then Multipurpose Blade or optional Whisking Accessory in the centre of the Bowl until it rests at the bottom.

4. Add ingredients to the Bowl. Place the Lid on the Bowl. Twist and lock it into place. The Lid will click when properly locked into place.
NOTE: The Cordless Food Chopper will operate with either the Multipurpose Blade or the Whisking Accessory in place, not both. Do not try to use both at the same time.
5. Press and hold the button downward (Speed 1 or 2) to start. The LED will light and display the Battery level for five seconds, then turn off.
IMPORTANT: The Bowl and Lid must be locked into place for the Cordless Food Chopper to operate.
Use the Drizzle basin to conveniently add liquid ingredients while processing dressings, mayonnaises, sauces, and more. Use the Pour spout for easier serving.
6. Release the button (speed 1 or 2) to stop chopping.
IMPORTANT: Do not try to remove the Bowl while the motor is still running.
7. Once processing is complete, remove the Lid, Drive Adapter, and Multipurpose Blade to use the Pour Spout.
NOTE: The LED will light and display the Battery level for five seconds, then turn off.
8. Press and hold the Battery Unlock Button to remove the Battery.
9. Recommended volume for Multipurpose Blade: raw meat (0.7 lb), cheese (0.25 lb), vegetable (3 cup), quick pulse until desired size.
TIP: A quick pulse is one second ON and one second OFF operation. Do not operate egg whip continuously more than 2 minutes.

CARE AND CLEANING

IMPORTANT: Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance. Remove the Battery before removing or attaching parts, or before cleaning.

1. Remove the Lid, Multipurpose Blade, and Drive Adapter.
2. **Dishwasher-safe parts — top rack only:** Bowl, Lid, Whisking Accessory, Drive Adapter, and Multipurpose Blade.
3. Wipe the Base with a damp cloth. Do not immerse the Base or Battery in water.
NOTE: Mild dish soap may be used, but do not use abrasive cleaners.
NOTE: For convenient storage, always reassemble the Cordless Food Chopper after cleaning.

FOR DETAILED INFORMATION ABOUT THE CORDLESS FOOD CHOPPER:

Visit www.kitchenaid.com/quickstart for additional instructions with videos, inspiring recipes, and tips on how to use and clean your Cordless Food Chopper.

ELECTRICAL EQUIPMENT WASTE DISPOSAL

DISPOSAL OF PACKING MATERIAL

The packing material is recyclable and is marked with the recycle symbol ♻️. The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

RECYCLING THE PRODUCT

- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

CUSTOMER SERVICE

In Australia:

For any questions, or to find the nearest Authorised KitchenAid Service Centre, please find our contact details below.

NOTE: All service should be handled locally by an Authorised KitchenAid Service Centre.

Toll free number: 1-800-990-990

Phone number: 02 49026500

Address Australia:

KitchenAid Australia Pty Ltd

6-8 Billbrooke Close

Cameron Park NSW 2285, Australia

Phone: 1-800-990-990

Mobile: 02 49026500

Email: enquiries@KitchenAid.com.au

In New Zealand:

Website: www.KitchenAid.co.nz

Email: enquiries@KitchenAid.co.nz

Phone: 0800 881 200

In other countries:

For all product related questions and after-sales matters, please contact your dealer to obtain the name of the nearest Authorised KitchenAid Service/Customer Centre.

For complete details on product information, instructions and videos, including Guarantee information, visit our website at: www.KitchenAid.com.au.

KitchenAid

©2023 All rights reserved.