

KitchenAid

CORDLESS HAND BLENDER

5KHBRV00A, 5KHBRV71A

OWNER'S MANUAL

PRODUCT SAFETY

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1.** Read all instructions. Misuse of appliance may result in personal injury.
- 2.** To protect against risk of electrical shock, do not put the Motor Body of appliance, USB Adapter, USB Cable or Battery in water or other liquid.
- 3.** This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge.
- 4.** Children should be supervised to ensure that they do not play with the appliance.
- 5.** Remove the Battery before assembling or disassembling and before cleaning. To unplug the adapter, grasp the plug and pull from the outlet. Never pull from the power cord.
- 6.** Avoid contacting moving parts.
- 7.** Do not modify or attempt to repair the appliance or the Battery.
- 8.** Do not operate any appliance or USB Adapter with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact KitchenAid at their customer service telephone number for information on examination, repair, or adjustment. This will ensure that the safety of the appliance and accessories is maintained.
- 9.** The use of accessories/attachments not recommended or sold by KitchenAid may cause fire, electric shock, or injury to persons.
- 10.** Do not let cord hang over edge of table or counter.
- 11.** Do not let cord contact hot surfaces, including the stove.
- 12.** Keeps hands and utensils out of the container while blending to prevent the possibility of severe injury to persons or damage to the unit. A scraper may be used but must be used only when the unit is not running.
- 13.** Blades are sharp. Handle thoroughly.
- 14.** When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.

- 15.** To reduce the risk of injury, never place cutting blade on Base without first putting Bowl properly in place.
- 16.** Be certain cover is securely locked in place before operating the appliance.
- 17.** Do not use an extension cord. Plug the adapter directly into a power source.
- 18.** Do not incinerate this appliance even if it is severely damaged. The batteries can explode in a fire.
- 19.** Keep hands and utensils away from the cutting blade while chopping food to reduce the risk of severe injury to person, or damage to the appliance. A scraper may be used, but only when the appliance is not running.
- 20.** Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.
- 21.** Refer to the “Care and Cleaning” section for instructions on cleaning the surfaces in contact with food.
- 22.** When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.
- 23.** Disconnect the Battery from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
- 24.** Prevent unintentional starting. Ensure the switch is in the off-position before connecting to the Battery, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch ON invites accidents.
- 25.** Recharge only with the adapter specified by the manufacturer. The adapter that is suitable for one type of Battery may create a risk of fire when used with another Battery.
- 26.** Use appliances only with KitchenAid 12 V Battery. Use of any other batteries may create a risk of injury and fire.
- 27.** When Battery is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the Battery terminals together may cause burns or a fire.

28. Under abusive conditions, liquid may be ejected from the Battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the Battery may cause irritation or burns.
29. Do not use a Battery or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
30. Do not expose a Battery or appliance to fire or excessive temperature. Exposure to fire or temperature above 129°C may cause explosion.
31. Follow all charging instructions and do not charge the Battery or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the Battery and increase the risk of fire.
32. Never service damaged batteries. Service of batteries should only be performed by the manufacturer or authorised service providers.
33. Do not use the appliance in rain or wet condition. Do not expose to rain — store indoors.
34. Do not use the appliance for other than intended use.
35. Do not operate Blending Arm continuously for more than 1 minute.
36. When emptying the Bowl or during cleaning, be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to sudden steaming.
37. Remove empty batteries from the appliance and safely disposed.
38. If the appliance is stored unused for a long period, remove the Battery.
39. If the Battery leaks, remove the Battery from the appliance and do not use the Battery again.
40. Rechargeable batteries are to be removed from the appliance before charging.
41. **IMPORTANT:** Use only with approved USB Adapter by market.

42. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farmhouses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

SAVE THESE INSTRUCTIONS

For complete details on product information, instructions and videos, including Guarantee information, visit

www.kitchenaid.com.au or www.KitchenAid.co.nz.

ELECTRICAL REQUIREMENT

USB Adapter:

Input: 100–240 V~, 50–60 Hz, 0.5 A

USB Output: 5 VDC, 2 A

Recommended ambient charging temperature: 5–40°C

External Battery (Lithium-ion): 5KRB12A

Nominal Voltage: 10.8 VDC

Maximum Voltage: 12 VDC

NOTE: If the adapter does not fit fully in the power source, contact a qualified electrician. Do not modify the adapter in any way.

Do not use, store, or charge Battery or products in locations where the temperature is less than 10°C or more than 40°C.

LITHIUM-ION BATTERY OPERATED PRODUCT DISPOSAL

Always dispose the Battery operated products according to federal, state, and local regulations. Contact a recycling agency in your area for recycling locations.

GETTING STARTED

BEFORE FIRST USE

1. Charge the Battery until it is fully charged.
2. Clean all the parts and accessories (see “Care and Cleaning” section).
3. Remove all packaging materials, if present.

NOTE: Some dust may be on the product. This is due to the recycled materials used in packaging. This can be cleaned with a soft towel.

BATTERY CHARGING

USING THE USB CABLE

1. Attach the USB Cable to the adapter. Connect the other end of the USB Cable to the Battery.
2. Plug the adapter into a power source.

PRODUCT USAGE

NOTE: Do not place the adapter in an area of extreme heat or cold. It will work best at normal room temperature.

IMPORTANT: Make sure that the Variable Speed Controller is not pressed and the Battery is removed before attaching or removing parts or accessories.

1. Insert the Battery on the Battery slot located at the top of the appliance, make sure it is aligned. The LED will light and display the Battery level for five seconds, then turn off.
2. If using a Pan Guard, place it on a flat surface. To insert the Pan Guard, angle the Blending Arm to one side of the mounting clip. Then, gently pull the other mounting clip outward and push down the Blending Arm. Ensure the Mounting Clips are secured into place.
3. Insert the Blending Arm into the handle and twist to lock. Press and hold the Unlock Button first, then the Variable Speed Controller to start. Use your free hand to cover the top of the Blender Jar for better stability and to avoid splashing. The LED will light and display the Battery level for five seconds, then turn off.

NOTE: Do not immerse Motor Body into liquids or other mixtures.

4. Use the draw up motion with the Cordless Hand Blender to move the ingredients within the Jar. Slowly draw it upwards against the side of the Jar. Repeat the process until the ingredients are at the desired consistency.
5. When finished, press and hold the Battery Unlock Button to remove the Battery.

CARE AND CLEANING

IMPORTANT: Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance. Make sure that the Variable Speed Controller is not pressed and the Battery is removed before attaching or removing parts or accessories.

1. Remove the Blending Arm or Pan Guard before cleaning.
2. **Dishwasher-safe parts — top rack only:** Pan Guard, Blender Jar, and Lid. Wash Blender Arm in hot, soapy water.
3. Wipe the Motor Body with a damp cloth. Mild dish soap may be used, but do not use abrasive cleansers.

FOR DETAILED INFORMATION ABOUT THE CORDLESS HAND BLENDER:

Visit www.kitchenaid.com/quickstart for additional instructions with videos, inspiring recipes, and tips on how to use and clean your Cordless Hand Blender.

ELECTRICAL EQUIPMENT WASTE DISPOSAL

DISPOSAL OF PACKING MATERIAL

The packing material is recyclable and is marked with the recycle symbol . The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

RECYCLING THE PRODUCT

- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

CUSTOMER SERVICE

In Australia:

For any questions, or to find the nearest Authorised KitchenAid Service Centre, please find our contact details below.

NOTE: All service should be handled locally by an Authorised KitchenAid Service Centre.

Toll free number: 1-800-990-990

Phone number: 02 49026500

Address Australia:

KitchenAid Australia Pty Ltd

6-8 Billbrooke Close

Cameron Park NSW 2285, Australia

Phone: 1-800-990-990

Mobile: 02 49026500

Email: enquiries@KitchenAid.com.au

In New Zealand:

Website: www.KitchenAid.co.nz

Email: enquiries@KitchenAid.co.nz

Phone: 0800 881 200

In other countries:

For all product related questions and after-sales matters, please contact your dealer to obtain the name of the nearest Authorised KitchenAid Service/Customer Centre.

For complete details on product information, instructions and videos, including Guarantee information, visit our website at: www.KitchenAid.com.au.

KitchenAid

©2023 All rights reserved.