

# **KitchenAid**

**CORDLESS HAND VACUUM**

**5KKVR100A, 5KKVR121A**

**OWNER'S MANUAL**

# PRODUCT SAFETY

## IMPORTANT SAFEGUARDS

**When using electrical appliances, basic safety precautions should always be followed, including the following:**

- 1.** Read all instructions. Misuse of appliance may result in personal injury.
- 2.** To protect against risk of electrical shock, do not put the Base of the appliance, USB Adapter, USB Cable, or Battery in water or other liquid.
- 3.** This appliance is not intended for use by children or by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge.
- 4.** Children should be supervised to ensure that they do not play with the appliance.
- 5.** Do not use the appliance on wet surfaces. Do not expose to rain, store indoors.
- 6.** Do not allow the Cordless Hand Vacuum to be used as a toy. Close attention is necessary when used by or near children.
- 7.** Keep hair, loose clothing, and fingers away from openings and moving parts. Loose clothes, jewelry, or long hair can be caught in internal moving parts.
- 8.** Use this product only for its intended use and with the attachments recommended in this manual.
- 9.** Do not use a damaged cord or USB Adapter. If the appliance is not working as it should, has been dropped, dropped in water, damaged, left outdoors, return it to a service centre.
- 10.** The use of attachments/accessories not recommended or sold by KitchenAid may cause fire, electric shock or injury. This will ensure that the safety of the appliance and accessories is maintained.
- 11.** Do not handle USB Adapter or the appliance with wet hands.
- 12.** Do not put any object into openings.
- 13.** Do not use the Cordless Hand Vacuum with any openings blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- 14.** Do not use the Cordless Hand Vacuum to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

- 15.** Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- 16.** Do not use the Cordless Hand Vacuum without the cup and/or filters in place.
- 17.** Disconnect the Battery from the appliance before making any adjustments, changing accessories, or when storing the appliance. Such preventive safety measures reduce the risk of accidentally turning ON the appliance.
- 18.** Prevent unintentional starting. Ensure the switch is in the off-position before connecting to the Battery, picking up or carrying the appliance.
- 19.** Recharge only with the charger specified by KitchenAid. A charger that is suitable for one type of Battery may create a risk of fire when used with another Battery.
- 20.** Use appliances only with KitchenAid 12 V Battery. Use of any other Battery may create a risk of injury and fire.
- 21.** When the Battery is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the Battery terminals together may cause burns or a fire.
- 22.** Under abusive conditions, liquid may be ejected from the Battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the Battery may cause irritation or burns.
- 23.** Do not use a Battery or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
- 24.** Do not expose a Battery or appliance to fire or excessive temperature. Exposure to fire or temperature above 129°C may cause an explosion.
- 25.** Follow all charging instructions and do not charge the Battery or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the Battery and increase the risk of fire.
- 26.** Never service damaged Battery. Service of Battery should only be performed by the manufacturer or authorised service providers.

27. Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.
28. Do not pull or carry by the cord. Keep cord away from heated surfaces.
29. Use extra care when cleaning on stairs.
30. Do not modify or attempt to repair the appliance or Battery.
31. Do not use an extension cord. Plug the adapter directly into power source.
32. Remove empty Batteries from the appliance and safely dispose.
33. Remove the Battery if the appliance is stored unused for a long period.
34. If the Battery leaks, remove the Battery from the appliance and do not use the Battery again.
35. Remove rechargeable Batteries from the appliance before charging.
36. **WARNING:** Use only with approved USB Adapter by market.
37. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farmhouses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.

## SAVE THESE INSTRUCTIONS

For complete details on product information, instructions and videos, including Guarantee information, visit [www.kitchenaid.com.au](http://www.kitchenaid.com.au) or [www.KitchenAid.co.nz](http://www.KitchenAid.co.nz).

### ELECTRICAL REQUIREMENTS

#### USB Adapter:

**Input:** 100–240 V~, 50–60 Hz, 0.5 A

**USB Output:** 5 VDC, 2 A

**Recommended ambient charging temperature:** 5–40°C

**External Battery (Lithium-ion):** 5KRB12A

**Nominal Voltage:** 10.8 VDC

**Maximum Voltage:** 12 VDC

**NOTE:** If the USB Adapter does not fit fully in the power source, contact a qualified electrician. Do not modify the USB Adapter in any way.

**NOTE:** Do not use or store batteries or products in locations where the temperature is less than 10°C or more than 40°C.

## LITHIUM-ION BATTERY OPERATED PRODUCT DISPOSAL

Always dispose the Battery operated products according to federal, state, and local regulations. Contact a recycling agency in your area for recycling locations.

## GETTING STARTED

### BEFORE FIRST USE

1. Charge the Battery until it is fully charged.
2. Clean all the parts and accessories (see “Care and Cleaning” section).
3. Remove all packaging materials, if present.

**NOTE:** Some dust may be on the product. This is due to the recycled materials used in packaging. This can be cleaned with a soft towel.

## BATTERY CHARGING

### USING THE USB CABLE

1. Attach the USB Cable to the adapter. Connect the other end of the USB Cable to the Battery.
2. Plug the USB Adapter into a power source.

## PRODUCT USAGE

**IMPORTANT:** Make sure the Battery is charged before using.

1. Make sure that the Power Button (⏻) is off before attaching the Battery.
2. Insert the Battery on the Battery slot located underneath of the appliance, make sure it is aligned. The LED will light and display the Battery level for five seconds, then turn off.
3. Insert the Filter and Screen Assembly into the Dirt Cup. Twist the Dirt Cup onto the Vacuum Base to lock into place.
4. Attach either the Crevice Tool or the Wide Angle Tool for cleaning.
5. Press the Power Button (⏻) to turn the unit ON at a normal speed and to active Boost function press and hold the Boost Button.
6. Release Boost Button to go back to normal speed and press the Power Button (⏻) again to turn the unit off.
7. Press and hold the Battery Unlock Button to remove the Battery.

**NOTE:** While the unit is off, press and hold the button to turn the Cordless Hand Vacuum ON at Boost speed.

**NOTE:** Only use the Cordless Hand Vacuum on dry items. Do not use the vacuum to clean wet messes.

**NOTE:** The Cordless Vacuum is not intended to clean fine powders. Fine powder quickly clogs filter leading to performance loss. If performance loss occurs, inspect and clean filter.

## CARE AND CLEANING

**IMPORTANT:** Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance. Remove the Battery before removing or attaching parts, or before cleaning.

To empty the Dirt Cup and clean the filter:

1. Remove the Battery.

2. Rotate to unlock and remove the Dirt Cup to empty.
3. Empty the debris from the Dirt Cup into a trash can.
4. Pull out the Filter and Screen Assembly from the Dirt Cup. Clean by rinsing under warm water until it is clear. Allow to air dry for at least 24 hours before using again.
5. Reinstall the filter and Screen into the Dirt Cup and then place the Dirt Cup back into place until it clicks.

**NOTE:** The paper filter need to be changed periodically and the pre-filter can also be changed if desired. The replacement filter is available as an accessory.

#### **FOR DETAILED INFORMATION ABOUT THE CORDLESS HAND VACUUM:**

Visit [www.kitchenaid.com/quickstart](http://www.kitchenaid.com/quickstart) for additional instructions with videos, and tips on how to use and clean your Cordless Hand Vacuum.

## **ELECTRICAL EQUIPMENT WASTE DISPOSAL**

### **DISPOSAL OF PACKING MATERIAL**

The packing material is recyclable and is marked with the recycle symbol ♻️. The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

### **RECYCLING THE PRODUCT**

- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

## **CUSTOMER SERVICE**

#### **In Australia:**

For any questions, or to find the nearest Authorised KitchenAid Service Centre, please find our contact details below.

**NOTE:** All service should be handled locally by an Authorised KitchenAid Service Centre.

**Toll free number:** 1-800-990-990

**Phone number:** 0249026500

**Address Australia:** KitchenAid Australia Pty Ltd

6-8 Billbrooke Close

Cameron Park NSW 2285, Australia

Phone: 1-800-990-990

Mobile: 0249026500

Email: [enquiries@KitchenAid.com.au](mailto:enquiries@KitchenAid.com.au)

#### **In New Zealand:**

Website: [www.KitchenAid.co.nz](http://www.KitchenAid.co.nz)

Email: [enquiries@KitchenAid.co.nz](mailto:enquiries@KitchenAid.co.nz)

Phone: 0800 881 200

#### **In other countries:**

For all product related questions and after-sales matters, please contact your dealer to obtain the name of the nearest Authorised KitchenAid Service/Customer Centre.

For complete details on product information, instructions and videos, including Guarantee information, For more information, visit our website at: [www.KitchenAid.com.au](http://www.KitchenAid.com.au).

# **KitchenAid**

©2023 All rights reserved.